

## PIPING FOOT

for 9 mm stitch width sewing machines  
ref: 202-088-200

Make your own piping or apply ready-made piping with this foot to create a professional-looking finish on home deco projects or garments.



### ⚠ Caution

Make sure to press the Lockout key when replacing the foot or attaching a binder.

For models without the Lockout key, turn the power switch off when attaching and detaching the foot and binder.

Please refer to your machine's instruction manual for accessory attachment and removal information.

### Machine Settings

Stitch pattern: Straight stitch  
(center needle position)




### To Sew

Raise the needle and the piping foot.

Insert the corded piping tape between two pieces of fabric (right sides together) and place them under the foot. Make sure the edge of the tape is aligned with the edge of the fabric.

Lower the foot so that the corded part of the tape fits in the left groove on the bottom of the foot. Sew the fabric while guiding the piping into the left groove as shown.

\* The right groove can be used for making piping tape.

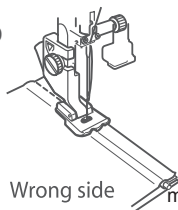

## PIED PASSEPOIL

pour machine à coudre avec 9 mm  
de largeur de couture Réf: 202-088-200

Réalisez vos propres passepoils ou appliquez du passepoil déjà prêt. Ce pied offre un rendu professionnel à vos projets déco ou à vos vêtements.

### ⚠ Attention

Appuyez sur le bouton de verrouillage lorsque vous remplacez le pied ou fixez un dispositif.

Pour les modèles de machines sans bouton de verrouillage, coupez le contact lorsque vous retirez ou fixez un accessoire.

Référez-vous au manuel d'instruction de votre machine à coudre pour toutes les informations concernant la fixation et le changement d'un accessoire.

### Réglages de la machine:

Motif du point: Point droit  
(position de l'aiguille au centre)



### Pour coudre

Levez l'aiguille et le pied passepoil.

Insérez le ruban passepoil entre les deux morceaux de tissu (endroit contre endroit) et placez les sous le pied. Assurez vous que le bord du ruban passepoil soit aligné avec le bord du tissu.

Abaissez le pied pour que le cordonnet du ruban passepoil s'emboîte dans le sillon de gauche sous le pied. Cousez le tissu tout en guidant le passepoil dans le sillon de gauche comme illustré ci-contre.

\* Le sillon de droit peut être utilisé pour confectionner des rubans passepoil.